

FOREO  
SWEDEN



# LUNA™ 4 play

FACIAL CLEANSING BRUSH



ONLINE MANUAL

# FULL USER MANUAL

## GETTING STARTED

Congratulations on discovering smarter skincare with LUNA™ 4 play. Before you begin to enjoy all the benefits of sophisticated technology in the comfort of your home, please take a few moments to carefully read the instructions in this manual.

Please READ ALL INSTRUCTIONS BEFORE USE and utilize this device only for its intended use as described in this manual.

**⚠ WARNING: NO MODIFICATION OF THIS EQUIPMENT IS ALLOWED.**

## LUNA™ 4 play OVERVIEW

You know when you discover something new & can't believe you ever lived without it? Well today is your lucky day! LUNA™ 4 play uses gentle T-Sonic™ pulsations & ultra-hygienic silicone bristles to break up & remove all the oil, sweat, makeup & SPF stuck deep within pores - that your fingers just can't reach on their own. It also massages skin to improve lymphatic drainage & boost radiance. Insanely effective. Completely addictive.

## GETTING TO KNOW LUNA™ 4 play

### THICKER TOUCHPOINTS

Provide a deep precision cleansing of oilier areas such as the T-zone.

### THINNER TOUCHPOINTS

Gently cleanse balanced or sensitive skin, and larger areas like the cheeks or neck.

### T-SONIC™ PULSATIONS

8 adjustable intensities & up to 8,000 pulsations per minute for deep and effective cleansing.

### INDICATOR LIGHT

Indicates low battery, charging status, Bluetooth pairing mode, and Remote Control mode.



### SMART SWEDISH DESIGN

100% waterproof and bacteria-resistant to reduce breakouts. 35x more hygienic than nylon facial cleansing brushes.

### PLUS & MINUS BUTTONS

Adjust intensity of T-Sonic™ pulsations to perfectly suit your skin's needs.

### UNIVERSAL POWER BUTTON

Turns device on and off.

### CHARGING PORT

Up to 300 uses per charge with included USB charging cable. 100% waterproof closure.

## HOW TO USE YOUR LUNA™ 4 play

### UNLOCK YOUR DEVICE

Before first use, download the FOREO For You mobile app to unlock and register your device. Follow these simple steps:

1. Download the FOREO For You app on your mobile phone.
2. Log in to your existing account, or sign up for a new one.
3. Add device (on the top of your screen).
4. Choose the device series.
5. Follow the instructions on the app and fill in the purchase information.

And your device is ready to use!



**NOTE:** LUNA™ 4 play may be locked when first unboxed – unlock it by holding down the + and – buttons together. The light will flash to indicate that your device is unlocked. Should you wish to lock your device for travel convenience, follow the same procedure.



## HOW TO USE



### 1. APPLY CLEANSER

Apply your facial cleanser evenly over damp face & neck. For optimal results, we recommend FOREO Micro-Foam Cleanser, because it transforms into delicate microbubbles that work very well with LUNA™ 4 play.



### 2. CLEANSE

Wet LUNA™ 4 play. Then press the universal button to turn on your device. You can adjust the intensity of the T-Sonic™ pulsations with the + and - buttons. Then glide the device in circular motions over your face & neck for up to 1 minute, or until skin is cleansed.



### 3. RINSE

Once finished, press the universal button to turn off LUNA™ 4 play, (or it will automatically turn off after 1 min). Then rinse your face & neck, and the device.

**NOTE:** Avoid using clay-based, silicone-based or grainy cleansers, exfoliators or scrubs, as they may damage the device's soft silicone touchpoints.

**TIP:** You can customize your device to your preferences on the FOREO app.

## CLEANING YOUR LUNA™ 4 play

Always clean LUNA™ 4 play thoroughly after use. Wash the brush surface with water and soap, then rinse with warm water. Pat dry with a lint-free cloth or towel. For optimal results, we recommend spraying the device with FOREO Silicone Cleaning Spray once a week, and rinsing with warm water.

**NOTE:** Never use cleaning products containing alcohol, petrol, or acetone, as they may irritate the skin and damage the silicone.

## IMPORTANT

### FOR OPTIMUM SAFETY:

- If you have a skin condition or any medical concerns, please consult a dermatologist before use.
- Cleansing with LUNA™ 4 play should be comfortable – if you experience discomfort, discontinue use immediately and consult a physician.
- Exercise particular care when cleansing the under-eye regions and do not bring the device into contact with the eyelids or eyes themselves.
- For reasons of hygiene, we do not recommend sharing your LUNA™ 4 play with anyone else.
- Avoid leaving your LUNA™ 4 play in direct sunlight and never expose it to extreme heat or boiling water.
- Close supervision is necessary when this device is used by, on, or near children and those with reduced physical and mental abilities.
- Discontinue use if this product appears damaged in any way. This product contains no serviceable parts.
- Given the efficiency of the FOREO cleansing routine, we recommend that you do not use LUNA™ 4 play for more than 3 minutes at a time.
- Use this device only for its intended use as described in this manual. If you do not find the answer to your specific question, or if you have any other questions regarding the device's operation, please visit [www.foreo.com](http://www.foreo.com)

## TROUBLESHOOTING

Precautions to be taken in the event of changes in the performance of LUNA™ 4 play.

If LUNA™ 4 play is not activated when pressing the universal button:

- Battery is dead, Recharge using USB charging cable for up to 2 hours until fully charged, and then restart your device by holding down the universal button.
- Interface is locked. Unlock it by holding down + and – buttons together.

If LUNA™ 4 play cannot be switched off and/or interface buttons do not respond:

- Microprocessor is temporarily malfunctioning. Press and hold universal button to restart the device.

If LUNA™ 4 play won't sync to the FOREO app:

- Ensure that your device is fully charged and that your Bluetooth is turned on.
- Switch your Bluetooth off and then on again to try reconnecting.
- Close the FOREO app and then reopen it to restart the process.
- Delete and reinstall the application - perhaps the application simply needs to be updated. After deleting and reinstalling the application, make sure to restart your phone.
- Delete your phone's cookies and cache memory.

## DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems).




This device should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this device is disposed of correctly, you will help prevent the potential negative consequences for the environment and human health which could be caused by inappropriate waste handling of the device. The recycling of materials will also help conserve natural resources.

For more information about the recycling of your device, please contact your local household waste disposal service or your place of purchase.

## BATTERY REMOVAL

**NOTE:** This process is not reversible. This action must only be undertaken when the device is ready to be disposed of.

Because this device contains a lithium-ion battery, the battery must be removed before disposal and should not be thrown away with household waste. To remove the battery, open the inner plastic shell after removing silicone outer layer and remove the battery to be disposed of in accordance with your local environmental regulations. Wear gloves during this process for your safety. Detailed visual instructions are provided below.

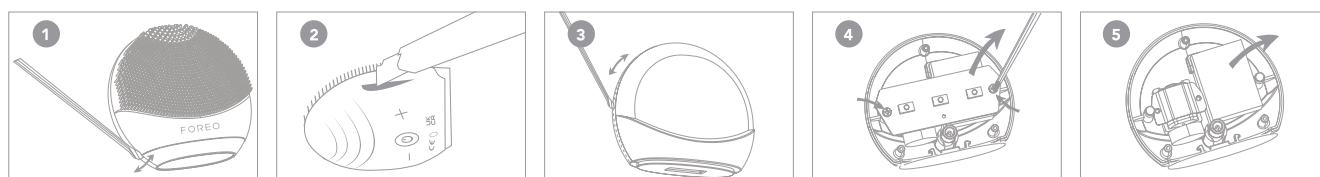

## SPECIFICATIONS

**MATERIALS:** Body-safe silicone & ABS plastic

**COLOR:** Tickle Me Pink!, Mint For You!, Cherry Up!

**SIZE:** 60 x 65 x 30 mm

**WEIGHT:** 54g

**BATTERY:** Li-ion 300mAh 3.7V

**USAGE:** Up to 300

**STANDBY:** 90 days

**FREQUENCY:** 100 Hz

**MAX NOISE LEVEL:** <50dB

**INTERFACE:** 3- button

**DISCLAIMER:** Users of this device do so at their own risk. Neither FOREO nor its retailers assume any responsibility or liability for any injuries or damages, physical or otherwise, resulting directly or indirectly from the use of this device. Furthermore, FOREO reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This device complies with Part 15 of the FCC Rules and contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

FOREO declares that this device is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity for the product is available at [www.foreo.com/support/eu-conformity](http://www.foreo.com/support/eu-conformity).

Model may be changed for improvements without notice.

©2025 FOREO. ALL RIGHTS RESERVED / TOUS DROITS RÉSERVÉS.

MANUFACTURED FOR / FABRIQUÉ POUR: FOREO.

EU IMP. & RP.: FAQ EUROPE D.O.O., RADNICKA CESTA 202, 10000 ZAGREB, CROATIA.

US DISTR.: FOREO INC., 1525 E PAMA LANE, LAS VEGAS, NV 89119, USA.

AUS DISTR.: FOREO AUS., 6 PROHASKY STREET, PORT MELBOURNE, VIC, 3207 AUSTRALIA.

UK RP: FOREO LTD., LAWFORD HOUSE, ALBERT PLACE, N3 1QA LONDON.